

*Continuous Forms Processing
& Mailing Equipment*



SPEDO 970/971 MERGER SPARE PARTS LIST

**SPEDO UK LTD, 76 WOOLMER WAY, BORDON, HAMPSHIRE GU35 9QF, UK
TEL: +44 (0) 1420 487442 • FAX: +44 (0) 1420 477827
E-MAIL: spedo@spedouk.com • WEBSITE: www.spedouk.com**

INDEX

ELECTRICAL PARTS PAGE 3


MECHANICAL PARTS PAGES 4 – 11

DRIVER COMPARTMENT.....	4
TRANSPORT ASSEMBLY.....	5 - 8
CENTRE CUTTER ASSEMBLY	9 - 11
SAFETY COVER ASSEMBLY	11


ELECTRICAL PARTS



SP 005 652
SWITCH, ON/OFF

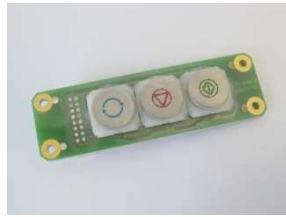

SP 005 554
PCB, 3-KEY, OPERATOR

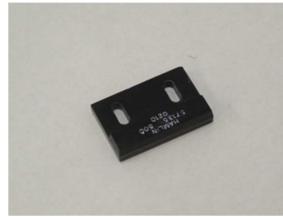

SP 000 072
SWITCH, SAFETY COVER



SP 005 653
SWITCH, EMERGENCY STOP



SP 006 162
PCB, MAIN CONTROL



SP 000 284
SWITCH, RUN-OUT



SP 004 829
MOTOR, MAIN DRIVE




SP 004 577
PCB, MOTOR CONTROL



SP 004 872
SENSOR, PROXIMITY

MECHANICAL PARTS

DRIVER COMPARTMENT

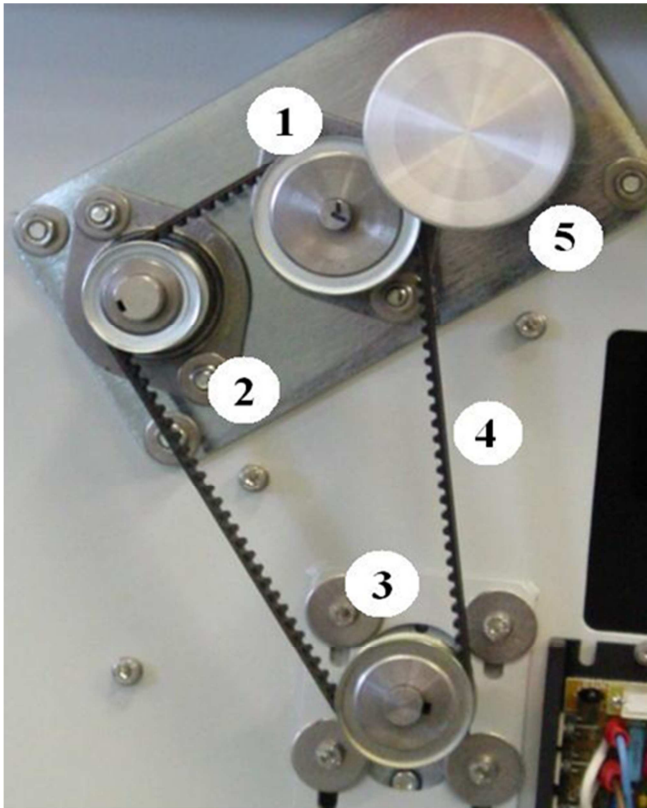

1. SP 002 135
PULLEY, 30T, 10MM



2. SP 004 867
PULLEY, 24T-5M-15
[12MM BORE]



3. SP 002 134
PULLEY, 20T, 15MM




4. SP 004 505
BELT, HTD, 500-5M-15




5. SP 002 146
HANDLE, TRACTOR
SHAFT ADJUSTING

TRANSPORT ASSEMBLY

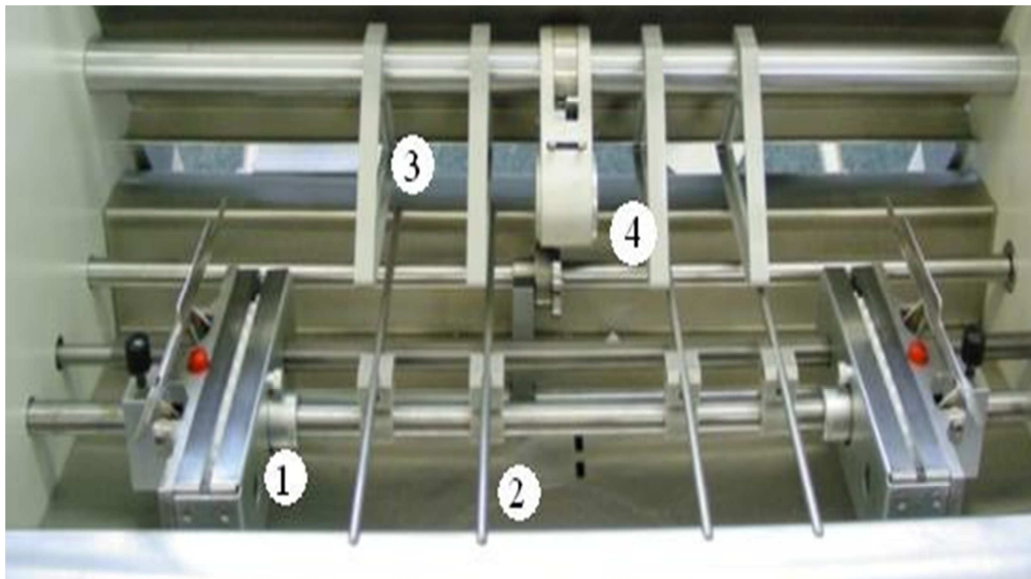

- 1. TRANSPORT ASSEMBLY
- 2. PAPER GUIDE, LOWER
- 3. PAPER GUIDE, UPPER
- 4. CENTRE CUTTER ASSEMBLY

TRACTOR FEED ASSEMBLY

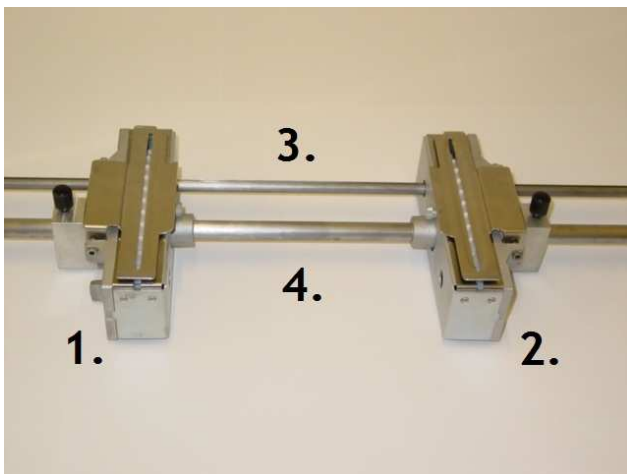

1. SP 005 139
TRACTOR ASSEMBLY,
SPLINED, LH



2. SP 005 138
TRACTOR ASSEMBLY,
SPLINED, RH




3. SP 005 232
SHAFT, TRACTOR
DRIVE, SPLINED



4. SP 004 863
SHAFT, TRACTOR
ADJUSTING

TRACTOR FEED ASSEMBLY SPARE PARTS

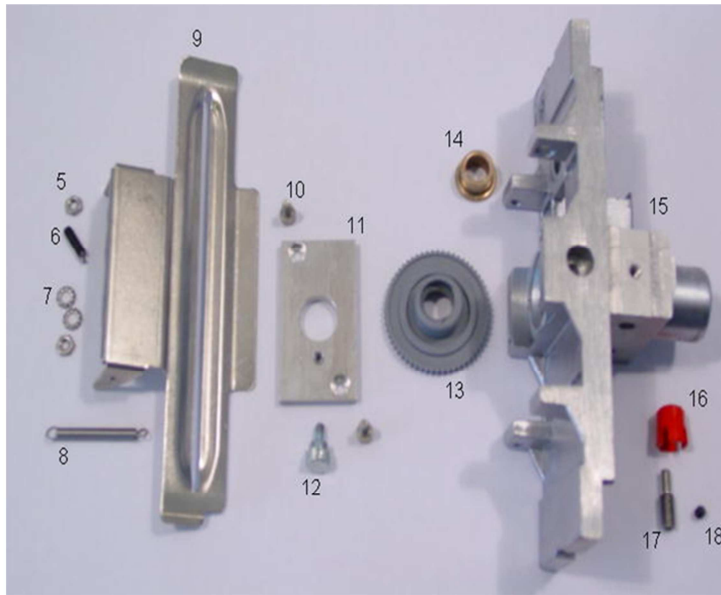

5. SP 000 953
NUT, M4



6. SP 000 277
PIN, THREADED,
ECCENTRIC



7. SP 000 622
WASHER, M4



8. SP 000 170
SPRING, TRACTOR
FLAP



9. SP 000 492
FLAP, TRACTOR, LH



SP 000 493
FLAP, TRACTOR, RH



10. SP 000 782
SCREW, M4 X 8MM



11. SP 000 165
TRACTOR LOCKING
PLATE



12. SP 001 965
SCREW, KNURLED



13. SP 005 054
NUT, SCROLL SHAFT,
LH



SP 005 055
NUT, SCROLL SHAFT,
RH



14. SP 000 092
BUSH, SCROLL SHAFT



15. SP 004 741
CASTING, TRACTOR
HOUSING, LH



16. SP 005 052
NUT, TRACTOR FLAP
HEIGHT ADJUSTING





17. SP 003 057
PIN, THREADED



18. SP 000 047
SCREW, GRUB, M4 X
4MM

TRACTOR FEED ASSEMBLY SPARE PARTS

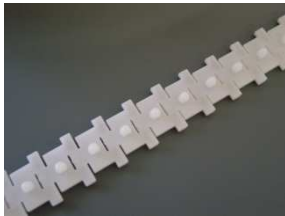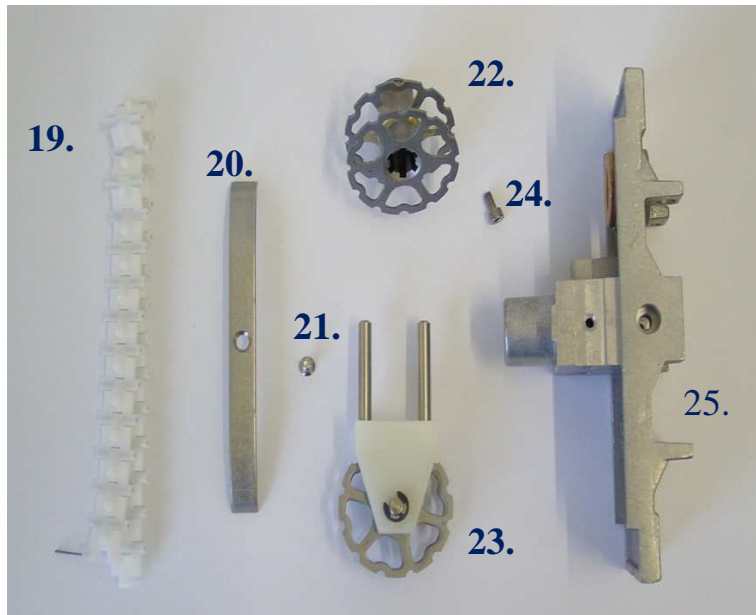

19. SP 000 198
LINK CHAIN
STANDARD



20. SP 004 452
GUIDE, TRACTOR LINK
CHAIN



21. SP 000 412
SCREW, M4 x 8MM,
COUNTERSUNK



22. SP 005 037
SPROCKET, TRACTOR,
SPLINED




23. SP 005 053
SPROCKET, FREE
TRACTOR



24. SP 000 621
SCREW, M4 x 12MM



25. SP 004 740
CASTING, TRACTOR
HOUSING, RH

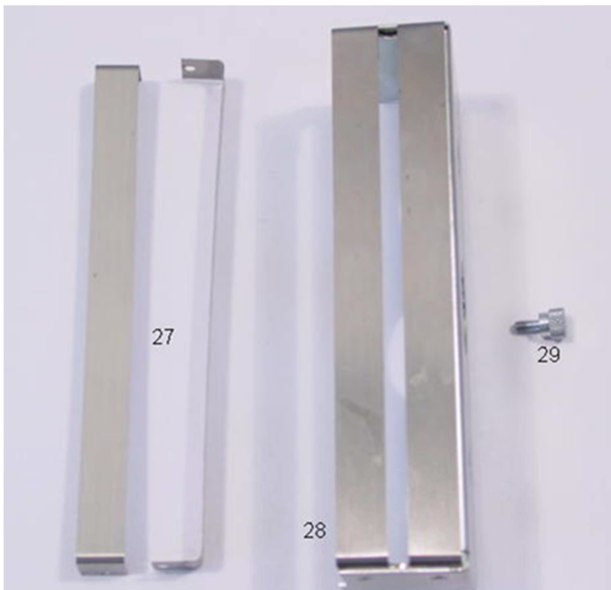

27. SP 004 852
FOIL, COVER
TRACTOR BOX




28. SP 004 699
COVER, TRACTOR BOX



29. SP 001 965
SCREW, KNURLED

TRACTOR FEED ASSEMBLY SPARE PARTS

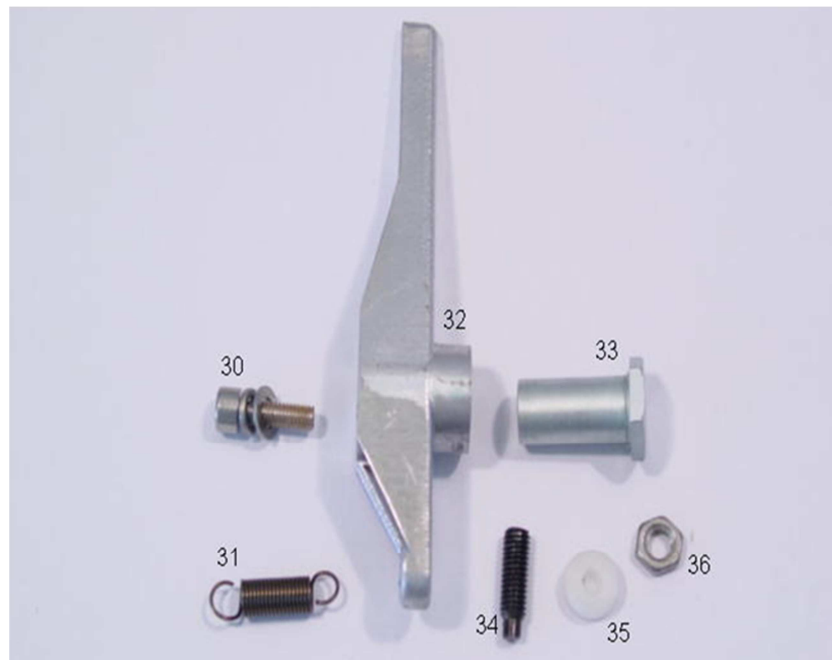

30. SP 000 454
SCREW, M5 X 12MM



31. SP 000 268
SPRING, TRACTOR
LOCKING LEVER



32. SP 004 684
LEVER, TRACTOR
LOCKING



33. SP 003 024
BUSH, LOCKING LEVER
MOUNTING



34. SP 003 056
PIN, ADJUSTING




35. SP 000 994
WASHER, NYLON,
LOCKING LEVER



36. NUT, HALF, M6

PAPER GUIDE, LOWER & UPPER

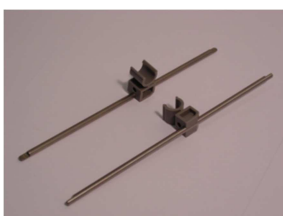

SP 004 799
PAPER GUIDE, LOWER




SP 000 228
PAPER GUIDE, UPPER

CENTRE CUTTER ASSEMBLY SPARE PARTS



SP 003 108
CENTRE CUTTER ASSEMBLY
[COMPLETE]

OPTIONAL CENTRE CUTTERS USED TO SPLIT WEB INTO SEPARATE STREAMS.
UP TO FOUR CUTTERS MAY BE FITTED.

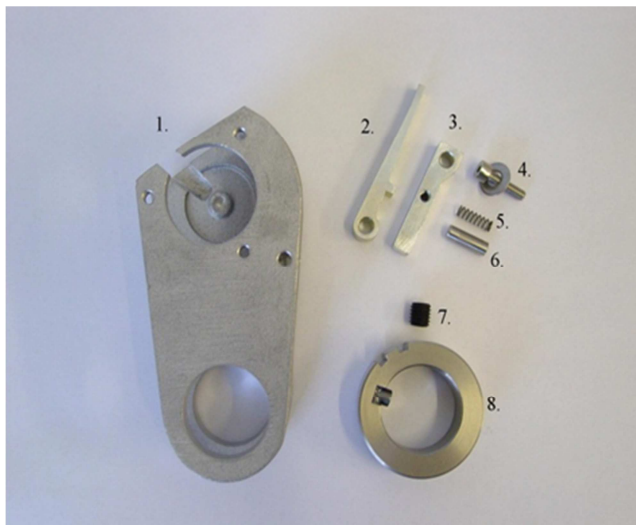

1. SP 006 038
BEARING ARM



2. SP 003 041
LEVER, LOCKING



3. SP 003 031
MOUNT, LOCKING
LEVER



4. SP 000 851
SCREW, M4 x 16MM
[WITH WASHER SP 000 711]



5. SP 000 240
SPRING, LOCKING
LEVER



6. SP 004 847
PIN, HINGE




7. SP 000 892
SCREW, M8 x 8MM,
GRUB



8. SP 001 866
RING, CLAMPING


CENTRE CUTTER ASSEMBLY SPARE PARTS

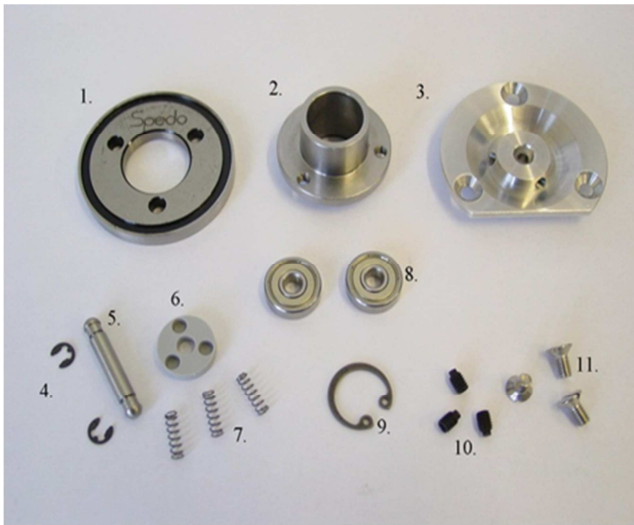

1. SP 000 064
BLADE, 90°



2. SP 003 229
HUB, CENTRE CUTTER
TOP

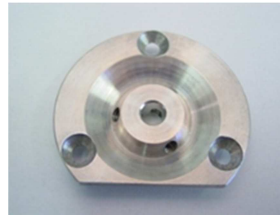

3. SP 003 002
PLATE, CENTRE
CUTTER



4. SP 002 022
CIRCLIP, 4MM, E-TYPE



5. SP 003 075
AXLE, CENTRE CUTTER
TOP HUB



6. SP 003 062
PLATE, SPRING



7. SP 002 228
SPRING, SPRING PLATE



8. SP 004 615
BEARING, CENTRE
CUTTER TOP HUB




9. SP 004 838
CIRCLIP, 16MM,
INTERNAL



10. SP 000 854
SCREW, M4 X 6MM,
GRUB



11. SP 000 412
SCREW, M4 X 8MM,
COUNTERSUNK

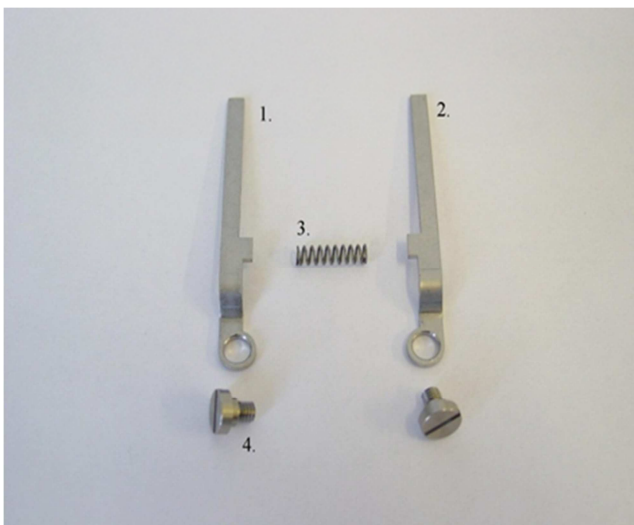

1. SP 004 845
LEVER, SIDE
ADJUSTING, LH



2. SP 004 475
LEVER, SIDE
ADJUSTING, RH




3. SP 000 330
SPRING, PRESSURE



4. SP 004 712
SCREW, SHOULDERED

CENTRE CUTTER ASSEMBLY SPARE PARTS

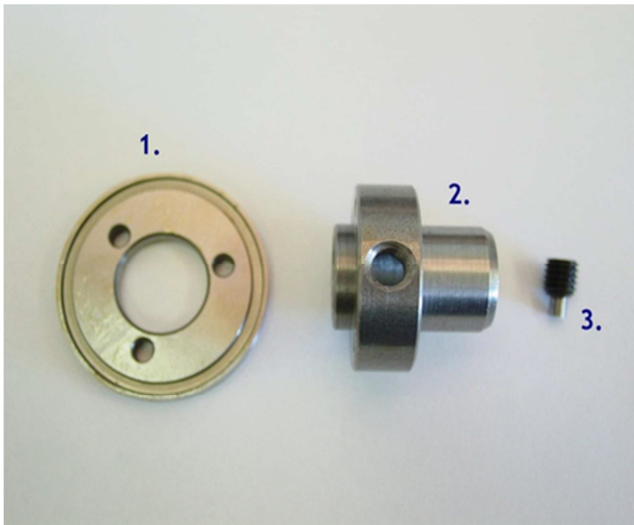

1. SP 000 064
BLADE, 90°



2. SP 001 913
HUB, LOWER



3. SP 004 631
SCREW, CENTRE
CUTTER



SP 000 389
BRIDGE, CENTRE
CUTTER

SAFETY COVER ASSEMBLY SPARE PARTS



SP 002 160 - SAFETY COVER



SP 005 234 – GAS DAMPER